
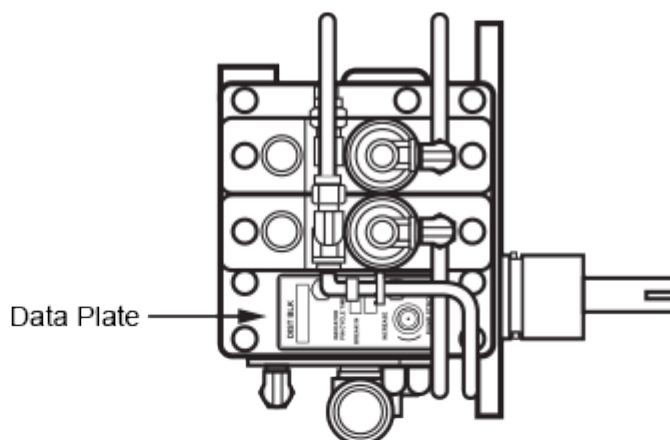




## Force Feed Lubricator Pump

The force feed lubricator provides oil to the cylinder bore for the piston rings and packing case for the piston rod packing seal rings. The lubricator plates provides direction for adjusting the flow of oil. If the plate is missing, please contact the [Ariel Response Center](#) and a replacement one can be provided.

Force Feed Lubricator  
Date Plate for Twin Pumps-  
Indicator Cycle Time:

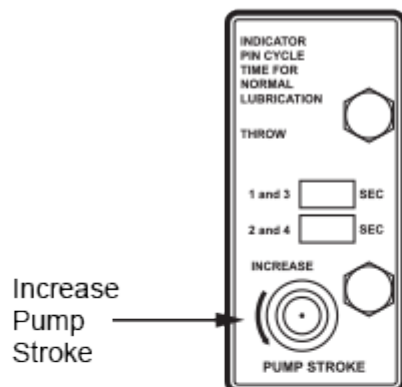

Force Feed Lubricator  
Data Plate for Single Pumps-  
Indicator Cycle Time:

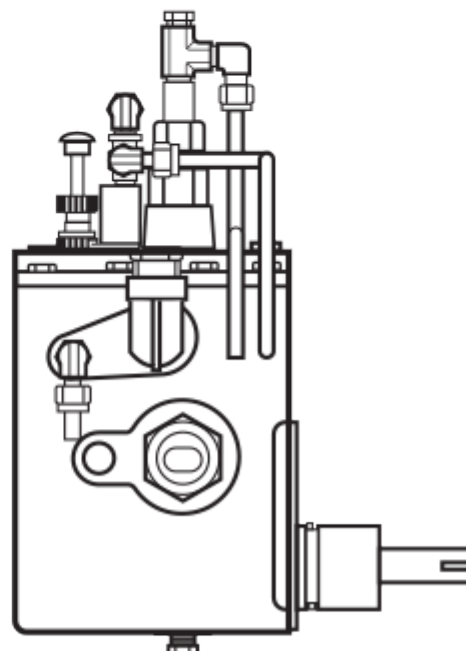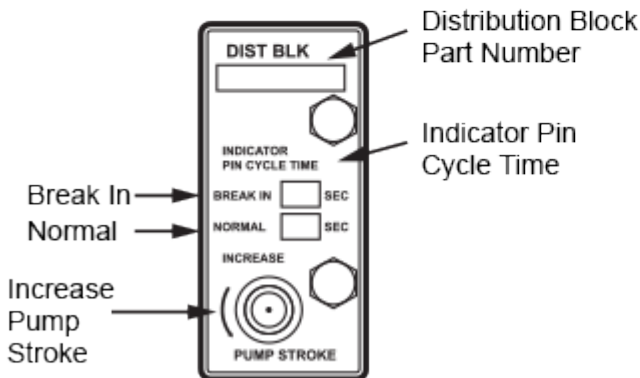

### NOTE:

The force feed lubricator box contains approximately 1/3 gallons of lubricant. An initial charge to the sight glass must be provided prior to initial start up.